

PROCEED WITH CAUTION

Once installed, LOCK BLØK cannot be easily repositioned.

Before attempting to attach LOCK BLØK to the classroom door, we highly recommend that you do a trial placement to ensure it will work properly.

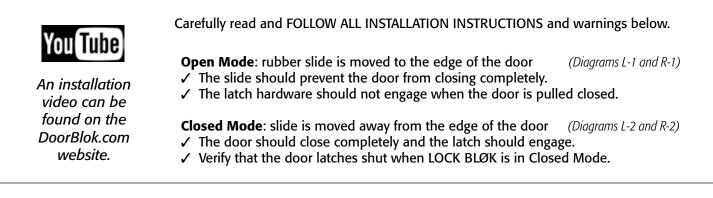

- 1. Face the side of the door that comes in contact with the door frame. For most classrooms, this will be the inside surface of the door.
- 2. Open the door and secure it in an open position. Clean and dry the area of the door where you are going to attach LOCK BLØK. (Isopropyl alcohol is recommended.) METAL DOORS: LOCK BLØK will not bond well to a cold door.
- 3. Place the rubber slide in the plastic housing.
- 4. If the door latch hardware is on the LEFT side of the door, move the slide to the left. If the door latch hardware is on the RIGHT side of the door, move the slide to the right.

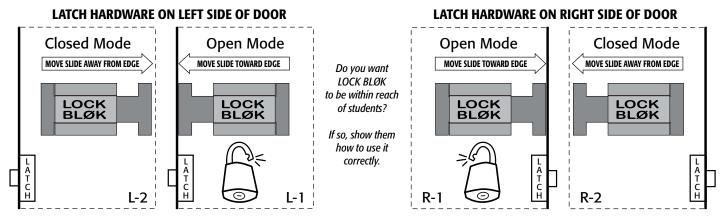

- 5. Remove the paper backing from the two adhesive strips attached to the back side of the plastic housing.
- 6. Without allowing the adhesive to come in contact with the door surface, align the edge of the rubber slide so that it is approximately an 1/8" away from the edge of the door.
- 7. Check to ensure that the plastic housing is level and then press it firmly against the door so that the adhesive forms a strong bond. *Suggestion:* For the best bond to occur, keep LOCK BLØK in Closed Mode for 24 hours.

WARNING: The door will not close completely and latch shut when LOCK BLØK is in Open Mode. If the door needs to be fully closed and latched, LOCK BLØK must be in Closed Mode.

LOCK BLØK was designed to minimize distracting noises caused by the classroom door. It is the user's obligation to ensure that the use of LOCK BLØK does not violate any applicable laws, fire codes, regulations, or policies. New Management, Inc. (NMI) makes no representations or warranties of any kind with regard to its products and expressly disclaims all warranties expressed or implied. (Please see our sales terms and conditions for further information.) NMI assumes no liability for improper placement or removal of LOCK BLØK. If you have any questions or would like to request a replacement, just give us a call. 888-639-6468